

Cyber-shot Station

Operating Instructions _____ GB

Mode d'emploi _____ FR


CSS-HD1

English

Before operating the product, please read this manual thoroughly and retain it for future reference.

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

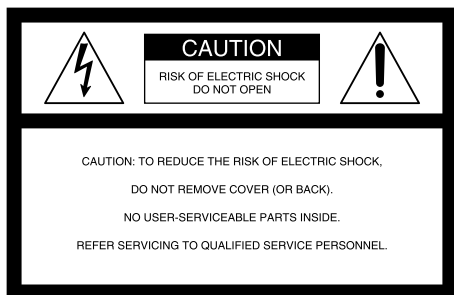

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

Use

Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed.

Do not defeat the safety purpose of the polarized plug by forcing it in.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

Installation

Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

For Customers in the U.S.A.

Safety Check

Upon completion of any service or repairs to the set, as the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition. your nearest Sony service station.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Notice on the supplied AC Adaptor for customers in the United Kingdom

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS1362, (i.e., marked with  or  mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

For Customers in Europe

This product has been tested and found compliant with the limits sets out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic field at the specific frequencies may influence the picture and sound of this unit.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Table of contents

Notes on using the Cyber-shot Station.....	8
Features.....	9
Trademarks.....	9
Identifying the parts.....	10
Set up.....	11
Placing the camera on the Cyber-shot Station	12
Removing the camera from the Cyber-shot Station	12
Charging the battery pack	12
Viewing images on a TV screen	13
Slide Show	14
Care and maintenance	14
Changing the battery of the Remote Control	14
Troubleshooting.....	15
Specifications	16


Notes on using the Cyber-shot Station

Refer to the operating instructions for your camera as well as this manual.

The Cyber-shot Station is not a dust-proofed, moist-proofed, or water proofed product.

About the MODEL SELECT switch

- The Cyber-shot Station allows you to attach your camera by setting the MODEL SELECT switch (A, B).
See page 11 for further details.
- The MODEL SELECT switch is set to **B** when purchased.
- Be sure to set the MODEL SELECT switch to the designated position before use, or it may cause a malfunction of your camera or the Cyber-shot Station.

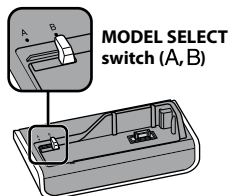

Do not use or keep the Cyber-shot Station in locations subject to the following conditions:

- Locations with extremes of temperature
The temperature in closed automobiles during summer may be extremely hot, causing deformation or malfunction of the Cyber-shot Station.
- Locations under direct sunlight or near heaters
This may cause deformation or a malfunction of the Cyber-shot Station.
- Locations subject to vibration
- Locations subject to strong magnetism

Precautions:


- Even if the CHARGE lamp is not lit, the unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the unit, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).
- Use the nearest wall outlet to get the AC Adaptor plugged in. If any malfunctions occur using the product, unplug the AC Adaptor to cut off the power source.
- The set is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the set itself has been turned off.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not use the Cyber-shot Station in locations that are subject to strong radio waves or radiation. Images may not be played back properly.
- Avoid other metallic objects to contact with the connecting parts of the Cyber-shot Station and the power cord. It may cause a short circuit.
- Recording contents cannot be compensated for if playback is not possible due to damaged "Memory Stick Duo", a malfunction of your camera or the Cyber-shot Station, etc.

Features

The CSS-HD1 can be used with the DSC-T100, DSC-T25, DSC-T20, DSC-W200, DSC-W90, DSC-W85, and DSC-W80 digital still cameras. Not all digital still cameras are available in all countries.

When you place a digital still camera (here in after referred to as the “camera”) on the Cyber-shot Station, you can use the Cyber-shot Station in the following way.

- You can view the high definition images of the camera by connecting the Cyber-shot Station to the high definition TV.
- You can easily view images on a TV screen with the wireless remote control.
Using the remote control, you can operate the followings:
 - Viewing images
 - Slide Show
 - Playback zoom
- You can easily start Slide Show by only pressing the SLIDE SHOW button on the remote control.
- The Cyber-shot Station can charge the battery pack inside the camera faster than the battery charger supplied with the camera.


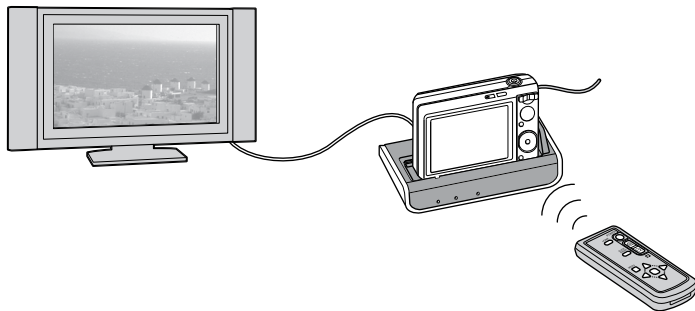


Trademarks


- **Cyber-shot** and “Cyber-shot Station” are trademarks of Sony Corporation.
- “Memory Stick Duo” is a trademark of Sony Corporation.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the [™] or [®] marks are not used in all cases in this manual.

Identifying the parts

Cyber-shot Station

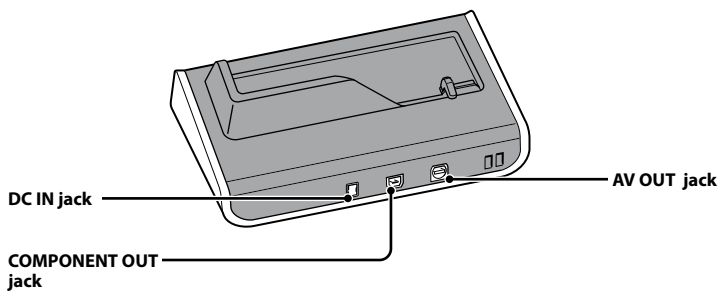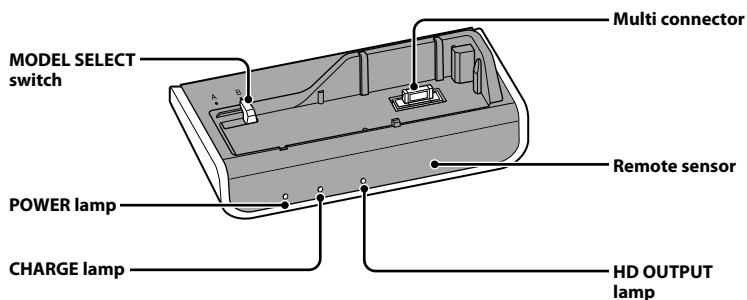

Remote Control

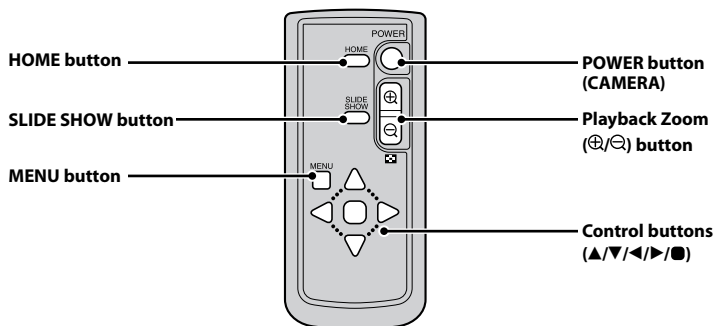


Set up

Preparing the Cyber-shot Station


1 Set the MODEL SELECT switch.

See the table below and set the MODEL SELECT switch to match with your camera.

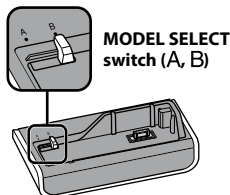

DSC-W200, DSC-W90, DSC-W85, DSC-W80	A
DSC-T100, DSC-T25, DSC-T20	B


2 Connect the AC Adaptor to the DC IN jack of the Cyber-shot Station.

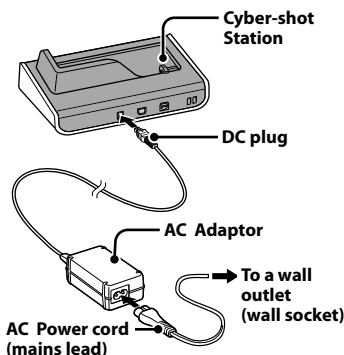

To use your Cyber-shot Station abroad - Power sources

You can use the Cyber-shot Station and the AC Adaptor (supplied) in any country or region where the power supply is within 100 V to 240 V AC 50/60 Hz.

Use a commercially available AC plug adaptor, if necessary, depending on the design of the wall outlet (wall socket).




Do not use an electronic transformer (travel converter), as this may cause a malfunction.

Preparing the remote control

Notes on the remote control

- The remote control is powered by a button type lithium battery (CR2025) installed at the factory. An insulation sheet is inserted to avoid the battery exhaustion. Remove the insulation sheet before using the remote control for the first time.

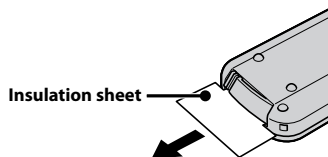


- Point the remote sensor of the Cyber-shot Station away from strong light sources such as direct sunlight or overhead lightings. Otherwise, the remote control may not function properly.
- The remote control range is less than five meters (for indoor use). Point the remote control at the remote sensor of the Cyber-shot Station. Try adjusting the angle of the remote control if you cannot operate the Cyber-shot Station.

Placing the camera on the Cyber-shot Station

Remove the Adaptor ring, the Conversion lens, etc. from the camera.

Attach the camera as shown below.

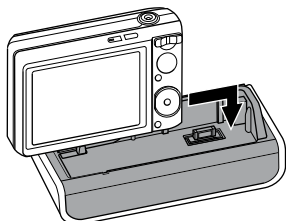


- Insert the "Memory Stick Duo" into the camera. When you use data in the internal memory, do not insert the "Memory Stick Duo" into the camera.
- Be sure to turn off the camera before placing it on or removing it from the Cyber-shot Station.

⚡ Tips

- You can attach the camera to the Cyber-shot Station smoothly by aligning the camera to the right corner of the Cyber-shot Station.
- Make sure that the camera is securely attached to the Cyber-shot Station.

Removing the camera from the Cyber-shot Station

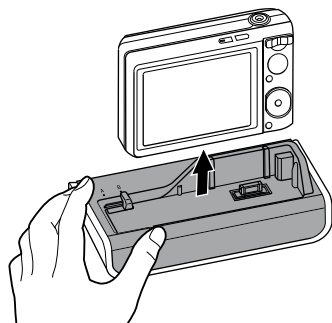

- Hold the Cyber-shot Station down when you remove the camera from the Cyber-shot Station.

⚡ Notes

- When removing the camera, make sure to lift the camera straight up. It may damage the camera or the Cyber-shot Station when some extra is added to the front or the sides.

Charging the battery pack

Place the camera with the battery pack inserted on the Cyber-shot Station.

Charging starts automatically. The CHARGE lamp of the Cyber-shot Station lights up.

- When the camera is turned on, the Cyber-shot Station stops charging the battery pack.
- When the charging reaches to Normal charge*, the CHARGE lamp goes off.
 - * Recording and playback time with Normal charge is approximately 90% of Full charge.
- For the time of the full-charge for a completely discharged battery at the temperature of 25 °C (77 °F), see the table below.

DSC-T100, DSC-T25, DSC-T20, DSC-W200, DSC-W90, DSC-W85, DSC-W80	Approx. 230 minutes
---	------------------------

- It may take longer to charge, depending on the charging condition and environment.
- If CHARGE lamp fails to light or blinks for more than 10 seconds, refer to "Troubleshooting".

⚡ Notes

- After attaching the camera to the Cyber-shot Station, the CHARGE lamp may blink for 3 to 10 seconds. This indicates communication between the camera and the Cyber-shot Station, and it is not a malfunction.

Charging temperature

The temperature range for charging is 0 °C to 40 °C (32 °F to 104 °F). However, to provide maximum battery efficiency, the recommended temperature range when charging is 10 °C to 30 °C (50 °F to 86 °F).

On battery life


- The battery life is limited. Battery capacity decreases little as you use it more and more, and as time passes. If the battery operating time seems shortened considerably, a probable cause is that the battery pack has reached the end of its life. Buy a new battery pack.
- The battery life varies according to how it is stored and the operating conditions and environment in which each battery pack is used.

Viewing images on a TV screen

You can playback images by connecting to the TV with the AV connecting cable (supplied) or the Component video cable (supplied).

1 Connect the Cyber-shot Station with the AV connecting cable.


Connect the AV connecting cable (supplied) to the AV OUT jack of the Cyber-shot Station and the audio/video input jacks of the TV.

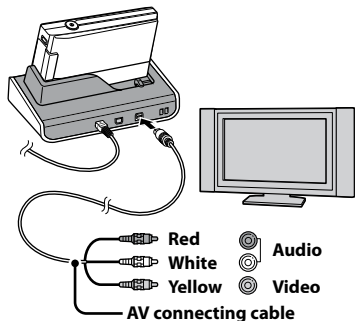

To connect the Cyber-shot Station with the Component video cable and the AV connecting cable

Connect the Component video cable to the COMPONENT OUT jack and the component video input jacks of the TV, and connect the AV OUT jack and the audio input jacks of the TV.

– Refer to the operating instructions supplied with the TV for connection.

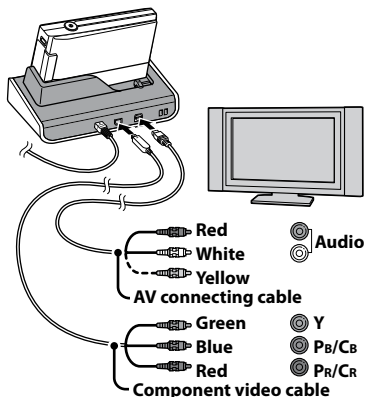

- Turn off both the camera and the TV before connecting the Cyber-shot Station and the TV with the Component video cable and the AV connecting cable.
- The signal format to be output via the COMPONENT OUT jack depends on the camera.
- To view the 1080i format images, you need the TV compatible with 1080i format.
- The Audio to be output via the AV out jack is monaural.
- When both the Component video cable and the AV connecting cable is connected, the images will be output via the COMPONENT OUT jack, not via the AV OUT jack.
- The Cyber-shot Station is not compatible with the S-VIDEO connecting cable.



2 Turn on the power by pressing the (playback) button of the camera or the POWER button on the remote control.

Notes

- The buttons on the camera or the remote control may not function immediately after the camera is attached to the Cyber-shot Station. This occurs when the camera is booting up and is not a malfunction. Wait for about 10 seconds.

3 Turn on the TV and set the TV/Video switch to "Video".


4 Press on the Control buttons of the remote control to select the image.

You can also select the image by pressing   on the Control buttons of the camera.

- The Cyber-shot Station is compatible with both NTSC and PAL TV systems. For further details, see the operating instructions supplied with the camera.

Slide Show

You can playback a series of still images and movies recorded with your camera by only pressing the SLIDE SHOW button on the remote control.

- 1 Turn on the power by pressing the  (playback) button of the camera or the POWER button on the remote control.
- 2 Press the SLIDE SHOW button on the remote control.

To cancel Slide Show

Press the SLIDE SHOW button on the remote control again.

- You can change the settings of Slide Show ([Interval], [Image], and [Repeat] etc.) with the settings on the camera. For further details, refer to the operating instructions supplied with the camera.

Care and maintenance

Clean the Cyber-shot Station with a soft cloth slightly moistened with water, and wipe the surface with a dry cloth. Do not use any type of solvent such as thinner, alcohol or benzine as this may damage the surface.

Changing the battery of the Remote Control

WARNING

Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

- When the lithium battery becomes weak, the operating distance of the Remote Commander may shorten, or the Remote Commander may not function properly. In this case, replace the battery with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.

For the State of California, USA only

Perchlorate Material - special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material: Lithium battery contains perchlorate.


CAUTION

Replace the battery with the specified type only. Otherwise, fire or injury may result.


Replacing the button type lithium battery

* Do not use any batteries other than CR2025.


- 1 Pull out the battery holder while pushing the tab on the holder.

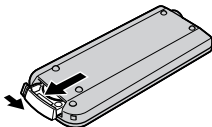


- 2 Take out the button type lithium battery from the holder.

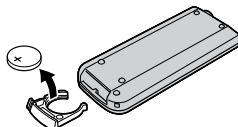

- 3 Put a new battery into the holder with its + side facing upward.

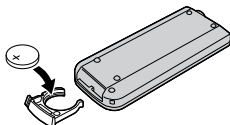

- 4 Insert the holder into the remote control until it clicks.

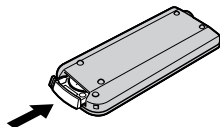

Troubleshooting

If any problems occur with your products, refer to the following solutions.
If the problem persists, contact your Sony dealer.

Symptom	Cause/Solution
Unable to charge the battery pack (when the CHARGE lamp fails to light)	<ul style="list-style-type: none">• The camera is turned on. → Turn the camera off.• The AC Adaptor is disconnected. → Connect the AC Adaptor properly.• The camera is not placed on the Cyber-shot Station correctly. → Place the camera correctly.• The battery pack is not installed correctly. → Install the battery pack correctly.• The battery pack is completely charged.• The battery pack installed into the camera is inapplicable. → Install the battery pack compatible with your camera.
The CHARGE lamp blinks fast, or blinks for more than 10 seconds	<ul style="list-style-type: none">• The battery pack installed into the camera is inapplicable. → Install the battery pack compatible with your camera.• The connection is not correct. → Remove the camera from the Cyber-shot Station and reconnect the AC Adaptor. After the CHARGE lamp goes off, place the camera on the Cyber-shot Station.
Unable to turn on the camera, or it suddenly gets turned off	<ul style="list-style-type: none">• The camera is not placed on the Cyber-shot Station correctly. → Place the camera correctly.• The AC Adaptor is disconnected. → Connect the AC Adaptor properly.
The images/sounds cannot be played back on a TV	<ul style="list-style-type: none">• The connection is not correct. → The audio cannot be output when only the Component video cable is connected. Connect the AV connecting cable to the audio jack correspond to the component video jack.• The Component video out setting of the camera is not correct. → Refer to the operating instructions supplied with the camera, and set the [COMPONENT] setting correctly.
The images cannot be output via the AV connecting cable	<ul style="list-style-type: none">• The Component video cable is connected to the Cyber-shot Station and the TV. → Unplug the Component video cable from the Cyber-shot Station.
Buttons on the remote control do not work, and no operations can be performed	<ul style="list-style-type: none">• The AC Adaptor is disconnected. → Connect the AC Adaptor properly.• The battery in the remote control is dead. → Replace the battery with a new one.
Unable to attach the camera on the Cyber-shot Station	<ul style="list-style-type: none">• The MODEL SELECT switch is not set to its designated position. → Set the MODEL SELECT switch to the designated position.

Specifications

Cyber-shot Station

Input/Output connectors

AV OUT jack: 10 pin connector
Video output, Audio output
(Monaural)

COMPONENT OUT jack
Y: 1 Vp-p, 75 Ω unbalanced
Pb/PR, Cb/CR: ± 350 mVp-p

DC IN jack
Multi connector

General

Dimensions (Approx.):

124 \times 45 \times 65 mm
(5 \times 1 13/16 \times 2 5/8 inches)
(w/h/d)

Mass (Approx.): 90 g (3.2 oz)

Operating temperature:

0 $^{\circ}$ C to 40 $^{\circ}$ C
(32 $^{\circ}$ F to 104 $^{\circ}$ F)

Storage temperature:

-20 $^{\circ}$ C to +60 $^{\circ}$ C
(-4 $^{\circ}$ F to +140 $^{\circ}$ F)

AC Adaptor

Input rating: 100 V to 240 V, AC 50/60 Hz,
11 W

Output rating: 4.2 V DC
See the label on the AC Adaptor
for other specifications.

Dimensions (Approx.):

48 \times 29 \times 81 mm
(1 15/16 \times 1 3/16 \times 3 1/4 inches)
(w/h/d, excluding projecting
parts)

Mass (Approx.): 130 g (5 oz)
excluding AC Power cord

Operating temperature:

0 $^{\circ}$ C to 40 $^{\circ}$ C
(32 $^{\circ}$ F to 104 $^{\circ}$ F)

Storage temperature:

-20 $^{\circ}$ C to +60 $^{\circ}$ C
(-4 $^{\circ}$ F to +140 $^{\circ}$ F)

Included items

- **Cyber-shot Station (CSS-HD1) (1)**
- **Wireless Remote Commander (RMT-CSS5)**
(A button type lithium battery installed) (1)
- **AV connecting cable (1)**
- **Component video cable (1)**
- **AC Adaptor (AC-LS5) (1)**
- **AC Power cord (mains lead) (1)**
- **Set of printed documentation**

Design and specifications are subject to change
without notice.

Français

Avant d'utiliser cet appareil, lisez attentivement ce mode d'emploi et conservez-le pour toute référence ultérieure.

AVERTISSEMENT

Afin de réduire les risques d'incendie ou de décharge électrique, n'exposez pas cet appareil à la pluie ou à l'humidité.

Note pour les clients européens

Cet appareil a été testé et jugé conforme aux limites établies par la directive EMC visant l'utilisation de câbles de connexion de moins de 3 mètres.

Attention

Le champ électromagnétique à des fréquences particulières peut avoir une incidence sur l'image et le son de cet appareil.

Traitement des appareils électriques et électroniques en fin de vie (Applicable dans les pays de l'Union Européenne et aux autres pays européens disposant de systèmes de collecte sélective)



Ce symbole, apposé sur le produit ou sur son emballage, indique que ce produit ne doit pas être traité avec les déchets ménagers. Il doit être remis à un point de collecte approprié pour le recyclage des équipements électriques et électroniques. En s'assurant que ce produit est bien mis au rebut de manière appropriée, vous aiderez à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine. Le recyclage des matériaux aidera à préserver les ressources naturelles. Pour toute information supplémentaire au sujet du recyclage de ce produit, vous pouvez contacter votre municipalité, votre déchetterie ou le magasin où vous avez acheté le produit.

Table des matières

Remarques sur l'utilisation de la Cyber-shot Station.....	4
Caractéristiques	5
Marques commerciales	5
Identification des différents éléments.....	6
Installation.....	7
Placement de l'appareil photo sur la Cyber-shot Station.....	8
Retrait de l'appareil photo de la Cyber-shot Station	8
Recharge de la batterie.....	8
Visualisation d'images sur un écran de téléviseur.....	9
Slide Show (Diaporama).....	10
Nettoyage et entretien	10
Changement de la batterie de la télécommande.....	10
Dépannage.....	11
Spécifications	12


Remarques sur l'utilisation de la Cyber-shot Station

Consultez le mode d'emploi de votre appareil ainsi que ce manuel.

La Cyber-shot Station ne doit pas être soumise à la poussière, à l'humidité ou à l'eau.

A propos du commutateur MODEL SELECT

- La Cyber-shot Station vous permet de fixer votre appareil photo en réglant le commutateur MODEL SELECT (A, B). Reportez-vous à la page 7 pour plus d'informations.
- Le commutateur MODEL SELECT est réglé sur **B** au moment de l'achat.
- Veuillez à régler le commutateur MODEL SELECT sur la position spécifiée avant de l'utiliser car cela pourrait sinon entraîner un problème de fonctionnement de votre appareil photo ou de la Cyber-shot Station.

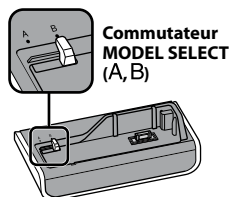

N'utilisez pas et ne rangez pas la Cyber-shot Station dans les endroits suivants :

- Endroits soumis à des températures extrêmes
La température à l'intérieur d'une voiture fermée pendant l'été peut être très élevée et risque de déformer la Cyber-shot Station ou d'entraîner un problème de fonctionnement.
- Endroits soumis à la lumière directe du soleil ou près de radiateurs
Cela risque de déformer la Cyber-shot Station ou d'entraîner un problème de fonctionnement.
- Endroits soumis à des vibrations
- Endroits soumis à des champs magnétiques puissants

Précautions :


- Même si le témoin CHARGE n'est pas allumé, le chargeur de batterie n'est pas isolé du secteur tant qu'il reste branché à la prise murale. En cas de problème lors de l'utilisation du chargeur de batterie, coupez immédiatement l'alimentation en débranchant la fiche de la prise murale.
- Branchez l'adaptateur secteur sur la prise murale la plus proche. En cas de problème lorsque vous utilisez cet appareil, débranchez l'adaptateur secteur pour couper la source d'alimentation.
- L'appareil n'est pas déconnecté de la source d'alimentation secteur tant qu'il reste branché sur la prise murale, même s'il a été mis hors tension.
- N'utilisez pas l'adaptateur CA dans un espace étroit (entre un mur et un meuble par exemple).
- N'utilisez pas la Cyber-shot Station dans des endroits soumis à des ondes radio ou à des rayonnements puissants. Les images risquent de ne pas pouvoir être lues correctement.
- Évitez tout contact entre des objets métalliques et les pièces de raccordement de la Cyber-shot Station et le cordon d'alimentation. Cela pourrait entraîner un court-circuit.
- Aucune compensation relative au contenu de l'enregistrement ne sera accordée si la prise de vues ou la lecture ne se font pas en raison d'un « Memory Stick Duo » endommagé, d'un mauvais fonctionnement de votre appareil photo ou de la Cyber-shot Station, etc.

Caractéristiques

La CSS-HD1 peut être utilisée avec les appareils photos numériques DSC-T100, DSC-T25, DSC-T20, DSC-W200, DSC-W90, DSC-W85 et DSC-W80. Tous les appareils photo numériques ne sont pas disponibles dans tous les pays.

Si vous placez un appareil photo numérique (appelé ci-après « appareil photo ») sur la Cyber-shot Station, vous pouvez utiliser celle-ci de la manière suivante.

- Vous pouvez visualiser les images haute définition de l'appareil photo en raccordant la Cyber-shot Station à un téléviseur haute définition.
- Vous pouvez facilement visualiser les images sur l'écran d'un téléviseur via la télécommande.
La télécommande permet d'effectuer les opérations suivantes :
 - Visualisation d'images
 - Diaporama
 - Zoom de lecture
- Vous pouvez facilement démarrer un diaporama (Slide Show) en appuyant simplement sur la touche SLIDE SHOW de la télécommande.
- La Cyber-shot Station vous permet de recharger la batterie en la laissant dans l'appareil photo, plus rapidement qu'avec le chargeur de batterie fourni avec l'appareil.

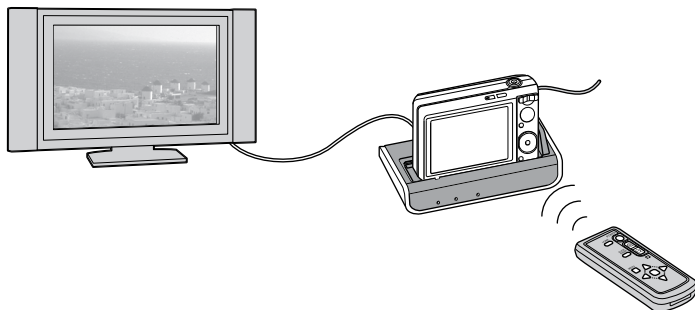


Marques commerciales


- **Cyber-shot** et « Cyber-shot Station » sont des marques commerciales de Sony Corporation.
- « Memory Stick Duo » est une marque commerciale de Sony Corporation.
- En outre, les noms de système et de produit utilisés dans ce manuel sont généralement des marques commerciales ou des marques déposées de leurs fabricants ou développeurs respectifs. Toutefois, les symboles TM ou ® ne sont pas toujours utilisés dans ce manuel.

Identification des différents éléments

Cyber-shot Station

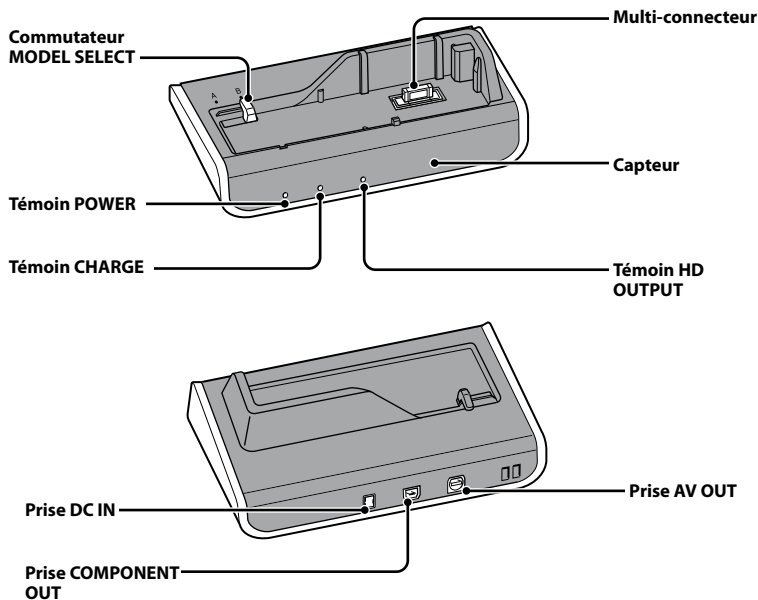


Télécommande

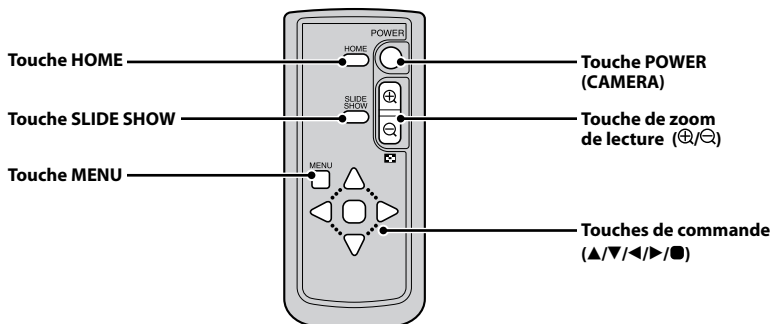

Installation


Préparation de la Cyber-shot Station

- 1 Réglez le commutateur MODEL SELECT.**
Consultez le tableau ci-dessous et réglez le commutateur MODEL SELECT pour qu'il corresponde à votre appareil photo.

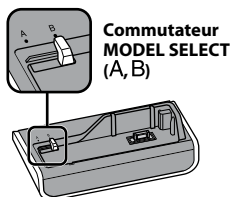

DSC-W200, DSC-W90, DSC-W85, DSC-W80	A
DSC-T100, DSC-T25, DSC-T20	B

- 2 Raccordez l'adaptateur secteur à la prise DC IN de la Cyber-shot Station.**

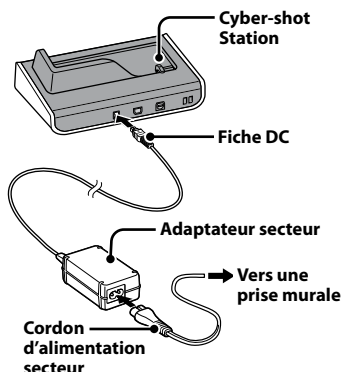

Pour utiliser votre Cyber-shot Station à l'étranger - Sources d'alimentation


Vous pouvez utiliser la Cyber-shot Station et l'adaptateur secteur (fourni) dans n'importe quel pays ou région où la tension d'alimentation est comprise entre 100 V et 240 V CA, 50/60 Hz.

N'utilisez pas de transformateur électronique (convertisseur de voyage), car cela risquerait d'entraîner un problème de fonctionnement.

Actions préalables en vue de l'utilisation de la télécommande

Remarques sur la télécommande


- La télécommande est alimentée par une pile bouton (CR2025) mise en place en usine. Une feuille isolante est insérée pour protéger la pile. Avant d'utiliser la télécommande pour la première fois, retirez la feuille isolante.

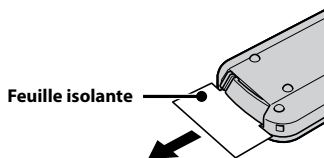

- Eloignez le capteur de la Cyber-shot Station des sources de lumière fortes telles que la lumière directe du soleil ou un plafonnier. Sinon, la télécommande risque de ne pas fonctionner correctement.
- La télécommande fonctionne dans un rayon inférieur à cinq mètres (lorsqu'elle est utilisée à l'intérieur). Dirigez la télécommande vers le capteur de la Cybershot Station. Si la Cyber-shot Station ne répond pas, ajustez l'angle de la télécommande.

Placement de l'appareil photo sur la Cyber-shot Station

Retirez la bague adaptatrice, le convertisseur, etc. de l'appareil photo.
Fixez l'appareil photo comme illustré ci-dessous.

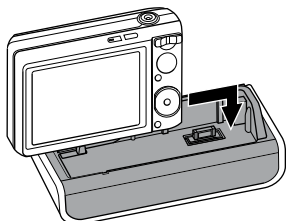


- Insérez le « Memory Stick Duo » dans l'appareil photo. Lorsque vous utilisez les données de la mémoire interne, n'insérez pas le « Memory Stick Duo » dans l'appareil photo.
- Mettez l'appareil photo hors tension avant de le placer sur la Cyber-shot Station ou de l'en retirer.

Conseils

- Vous pouvez fixer facilement l'appareil photo sur la Cyber-shot Station en alignant l'appareil sur le coin droit de la Cyber-shot Station.
- Vérifiez que l'appareil photo est correctement fixé à la Cyber-shot Station.

Retrait de l'appareil photo de la Cyber-shot Station

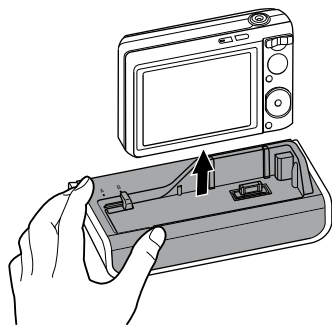

- Maintenez la Cyber-shot Station lorsque vous retirez l'appareil photo de la Cyber-shot Station.

Remarques

- Lorsque vous retirez l'appareil photo, soulevez-le en le tenant bien droit. Vous risquez d'endommager l'appareil photo ou la Cyber-shot Station si vous penchez vers l'avant ou les côtés.

Recharge de la batterie

Insérez la batterie dans l'appareil photo, puis placez-le sur la Cyber-shot Station.

La charge commence automatiquement. Le témoin CHARGE de la Cyber-shot Station s'allume.

- Lorsque l'appareil photo est allumé, la Cyber-shot Station cesse de recharger la batterie.
- Lorsque la charge atteint le niveau de recharge normale*, le témoin CHARGE s'éteint.
 - * La durée d'enregistrement ou de lecture en recharge normale correspond à environ 90 % de la durée en recharge complète.
- Le tableau suivant indique le temps de recharge complète pour une batterie complètement déchargée, à une température de 25 °C (77 °F).

DSC-T100, DSC-T25, DSC-T20, DSC-W200, DSC-W90, DSC-W85, DSC-W80	environ 230 minutes
---	------------------------

- La charge peut prendre plus de temps, selon les conditions et l'environnement de charge.
- Si le témoin CHARGE ne s'allume pas ou s'il clignote pendant plus de 10 secondes, reportez-vous à la section « Dépannage ».

Remarques

- Après avoir fixé l'appareil photo sur la Cyber-shot Station, il est possible que le témoin CHARGE clignote pendant 3 à 10 secondes. Cela indique une communication entre l'appareil photo et la Cyber-shot Station et ne constitue aucun cas un problème de fonctionnement.

Température de charge

La plage des températures de charge est comprise entre 0 °C et 40 °C (32 °F et 104 °F). Toutefois, pour offrir un maximum d'efficacité, la plage des températures de charge recommandée est comprise entre 10 °C et 30 °C (50 °F et 86 °F).

Durée de service de la batterie


- La durée de service de la batterie est limitée. La capacité de la batterie diminue progressivement à l'usage et avec le temps. Si l'autonomie après la recharge diminue considérablement, il est probable que la batterie a atteint la fin de sa durée de service. Procurez-vous une batterie neuve.
- La durée de service de la batterie varie en fonction des conditions de stockage, d'utilisation et ambiantes.

Visualisation d'images sur un écran de téléviseur

Vous pouvez lire des images en raccordant l'appareil à un téléviseur à l'aide du câble de liaison audio et vidéo (fourni) ou du câble vidéo composante (fourni).

1 Raccordez la Cyber-shot Station à l'aide du câble de liaison audio et vidéo.


Branchez le câble de liaison audio et vidéo (fourni) sur la prise AV OUT de la Cyber-shot Station et les prises d'entrée audio/vidéo du téléviseur.

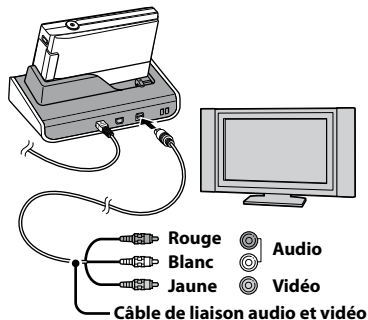

Pour raccorder la Cyber-shot Station à l'aide du câble vidéo composante et du câble de liaison audio et vidéo

Raccordez le câble vidéo composante à la prise COMPONENT OUT et aux prises d'entrée vidéo composante du téléviseur et raccordez la prise AV OUT et les prises d'entrée audio du téléviseur.

- Reportez-vous au mode d'emploi fourni avec votre téléviseur concernant le raccordement.

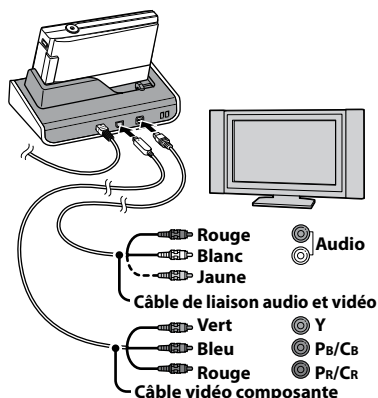

- Mettez l'appareil photo et le téléviseur hors tension avant de raccorder la Cyber-shot Station et le téléviseur au moyen du câble vidéo composante et du câble de liaison audio et vidéo.
- Le format de signal émis via la prise COMPONENT OUT dépend de l'appareil photo.
- Le téléviseur doit être compatible avec le format 1080i pour permettre la visualisation des images au format 1080i.
- Le son émis via la prise AV OUT est monaural.
- Lorsque le câble vidéo composante et le câble de liaison audio et vidéo sont tous deux raccordés, les images sont émises via la prise COMPONENT OUT et non via la prise AV OUT.
- La Cyber-shot Station n'est pas compatible avec les câbles de liaison S-VIDEO.



2 Mettez l'appareil photo sous tension en appuyant sur sa touche (lecture) ou sur la touche POWER de la télécommande.

Remarques

- Il est possible que les touches de l'appareil photo ou de la télécommande ne fonctionnent pas immédiatement après avoir fixé l'appareil photo sur la Cyber-shot Station. Cela se produit lorsque l'appareil photo commence à être rechargé et ne constitue en aucun cas un dysfonctionnement. Attendez environ 10 secondes.

3 Mettez le téléviseur sous tension et réglez le commutateur TV/Vidéo sur « Vidéo ».


4 Appuyez sur / sur les touches de commande de la télécommande pour sélectionner l'image.

Vous pouvez également sélectionner l'image en appuyant sur  /  sur les touches de commande de l'appareil photo.

- La Cyber-shot Station est compatible avec les systèmes de télévision NTSC et PAL. Pour plus d'informations, reportez-vous au mode d'emploi fourni avec l'appareil photo.

Slide Show (Diaporama)

Vous pouvez lire une série d'images fixes et de films enregistrés avec votre appareil photo en appuyant simplement sur la touche SLIDE SHOW de la télécommande.

- 1 Mettez l'appareil photo sous tension en appuyant sur sa touche  (lecture) ou sur la touche POWER de la télécommande.
- 2 Appuyez sur la touche SLIDE SHOW de la télécommande.

Pour annuler le diaporama

Appuyez de nouveau sur la touche SLIDE SHOW de la télécommande.

- Vous pouvez modifier les réglages du diaporama ([Intervalle], [Image] et [Répété] etc.) avec les réglages de l'appareil photo. Pour obtenir plus d'informations, reportez-vous au mode d'emploi fourni avec l'appareil photo.

Nettoyage et entretien

Nettoyez la Cyber-shot Station avec un chiffon doux légèrement humidifié, puis essuyez sa surface avec un chiffon sec. N'utilisez pas de solvants, tels que du diluant, de l'alcool ou de l'essence, qui risqueraient d'abîmer la surface de l'appareil.

Changement de la batterie de la télécommande

AVERTISSEMENT

La pile peut exploser si vous ne la manipulez pas avec soin. Ne rechargez pas la pile, ne la démontez et ne la jetez pas au feu.


ATTENTION

Remplacez la batterie par une batterie correspondant au type spécifié uniquement. Sinon vous risquez de provoquer un incendie ou des blessures.


Remplacement de la pile bouton au Lithium

* N'utilisez pas de piles autres que celles de type CR2025.


- 1 Retirez le support de la pile tout en appuyant sur sa languette.

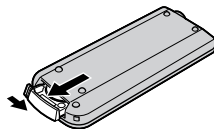


- 2 Retirez la pile bouton au lithium de son support.

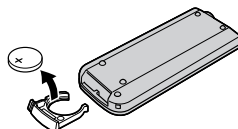

- 3 Placez une pile neuve dans le support, pôle + vers le haut.

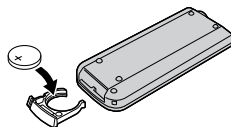

- 4 Insérez le support dans la télécommande jusqu'à ce qu'il s'encliquette.

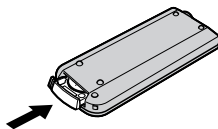

Dépannage

Si un problème survient avec vos produits, reportez-vous aux solutions suivantes.
Si les problèmes persistent, contactez votre revendeur Sony.

Symptôme	Cause/Solution
Impossible de recharger la batterie (lorsque le témoin CHARGE ne s'allume pas)	<ul style="list-style-type: none">• L'appareil photo est sous tension. → Mettez-le hors tension.• L'adaptateur secteur est débranché. → Raccordez correctement l'adaptateur secteur.• L'appareil photo n'est pas placé correctement sur la Cyber-shot Station. → Placez correctement l'appareil photo.• La batterie n'est pas installée correctement. → Installez la batterie correctement.• La batterie est complètement chargée.• La batterie rechargeable installée dans l'appareil photo est inutilisable. → Utilisez une batterie compatible avec votre appareil photo.
Le témoin CHARGE clignote rapidement ou normalement pendant plus de 10 secondes	<ul style="list-style-type: none">• La batterie rechargeable installée dans l'appareil photo est inutilisable. → Utilisez une batterie compatible avec votre appareil photo.• La connexion n'est pas correcte. → Retirez l'appareil photo de la Cyber-shot Station et rebranchez l'adaptateur secteur. Lorsque le témoin CHARGE est éteint, placez l'appareil photo sur la Cyber-shot Station.
Impossible de mettre sous tension l'appareil photo, car il s'éteint de lui-même de manière inattendue	<ul style="list-style-type: none">• L'appareil photo n'est pas placé correctement sur la Cyber-shot Station. → Placez correctement l'appareil photo.• L'adaptateur secteur est débranché. → Raccordez correctement l'adaptateur secteur.
Impossible de lire les images/sons sur un téléviseur	<ul style="list-style-type: none">• Le raccordement n'est pas correct. → Le son ne peut pas être émis lorsque seul le câble vidéo composante est raccordé. Raccordez le câble de liaison audio et vidéo à la prise audio correspondant à la prise vidéo composante.• Le réglage de sortie vidéo composante de l'appareil photo n'est pas correct. → Reportez-vous au mode d'emploi fourni avec l'appareil photo et réglez correctement le paramètre [COMPONENT].
Les images ne peuvent pas être émises via le câble de liaison audio et vidéo	<ul style="list-style-type: none">• Le câble vidéo composante est raccordé à la Cyber-shot Station et au téléviseur. → Débranchez le câble vidéo composante de la Cyber-shot Station.
Les touches de la télécommande ne fonctionnent pas et il est impossible d'exécuter une opération	<ul style="list-style-type: none">• L'adaptateur secteur est débranché. → Raccordez l'adaptateur secteur correctement.• La pile de la télécommande est épuisée. → Remplacez-la par une pile neuve.
Il est impossible d'installer l'appareil sur la Cyber-shot Station	<ul style="list-style-type: none">• Le commutateur MODEL SELECT n'est pas réglé sur la position spécifiée. → Réglez le commutateur MODEL SELECT sur la position spécifiée.

Spécifications

Cyber-shot Station

Connecteurs d'entrée/de sortie

Prise AV OUT: Connecteur à 10 broches
Sortie vidéo, sortie audio (mono)

Prise COMPONENT OUT
Y : 1 Vc-c, 75 Ω , asymétrique
Pb/PR, CB/CR : ± 350 mVc-c

Prise DC IN
Multi-connecteur

Caractéristiques générales

Dimensions (environ) :

124 \times 45 \times 65 mm
(5 \times 1 13/16 \times 2 5/8 pouces)
(l/h/p)

Poids (environ) : 90 g (3,2 onces)

Température de fonctionnement :
0 °C à 40 °C
(32 °F à 104 °F)

Température de stockage :
-20 °C à +60 °C
(-4 °F à +140 °F)

Adaptateur secteur

Tension d'alimentation :

100 V à 240 V CA 50/60 Hz,
11 W

Tension de sortie :

4,2 V CC
Reportez-vous à l'étiquette collée
sur l'adaptateur secteur pour
connaître les autres spécifications.

Dimensions (environ) :

48 \times 29 \times 81 mm
(1 15/16 \times 1 3/16 \times 3 1/4 pouces)
(l/h/p, à l'exclusion des parties
saillantes)

Poids (environ) : 130 g (5 onces)
à l'exclusion du cordon
d'alimentation CA

Température de fonctionnement :
0 °C à 40 °C
(32 °F à 104 °F)

Température de stockage :
-20 °C à +60 °C
(-4 °F à +140 °F)

Articles inclus

- Cyber-shot Station (CSS-HD1) (1)
- Télécommande sans fil (RMT-CSS5)
(Pile bouton au lithium déjà installée) (1)
- Câble de liaison audio/vidéo (1)
- Câble vidéo composante (1)
- Adaptateur secteur (AC-LSS) (1)
- Cordon d'alimentation secteur (1)
- Jeu de documents imprimés

La conception et les spécifications sont sujettes
à modification sans préavis.



Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Imprimé sur papier 70 %, ou plus, recyclé avec de l'encre à base d'huile végétale sans COV (composés organiques volatils).

<http://www.sony.net/>

Printed in Japan

